



MOTION PRO, INC.
3171 Swetzer Road
Loomis, CA 95650
Tel 650.594.9600 Fax 650.594.9610
www.motionpro.com

INSTRUCTIONS

MOTION PRO FORK OIL LEVEL ADJUSTMENT TOOL P/N 08-0121

WARNING!

Wear eye protection to prevent eye injury from escaping gas and/or metal chips. We recommend that a qualified mechanic in a properly equipped shop perform this procedure.

1. Support the motorcycle securely on a stand with the front wheel off the ground.
2. Using your vehicle's service manual, perform the steps to the point where the fork tube assemblies are removed. Note: Loosen the fork caps when the top triple clamp bolts are loose, but the bottom triple clamp bolts are still tight.
3. Release any air pressure in the forks before removing the caps. If your forks do not have air fittings, unscrew the caps to the point where the "O" rings unseat. This will bleed any air from the forks. Remove the caps and fork springs.
4. Replace the fork oil if needed (see service manual). Use only type and weight of oil recommended by the fork manufacturer. Bleed all air from the damper rods or cartridges. This will affect oil level if not done.
5. On most models, fork oil levels are set with the fork springs out and the forks fully compressed. Consult your vehicle's service manual for the proper procedure. Support the forks in a vise, in an upright position. Caution: Over tightening the vise will permanently damage the fork tubes.
6. Set the fork oil level tool by adjusting the collar up or down on the steel tube. When set properly, the length of tube below the collar will be equal to the fork manufacturer's oil level. Install the steel tube into the fork tube, resting the collar on top of the fork tube. At this point the end of tube should be submerged in oil; add oil if needed.
7. While holding the collar securely on the fork tube, withdraw the pump plunger with the other hand. Continue this process until no more oil is being pumped from the fork tube.
8. Reinstall the springs, caps and any washers or spacers removed. Tighten the caps to the manufacturer's torque specification. Reinstall the fork tube assemblies. Refer to your vehicle's service manual.
9. After each use, clean the plunger and syringe body with soapy water or other aqueous cleaner like Simple Green. Rinse with water and store disassembled. This will extend the life of the plunger seal as much as possible. Prolonged contact with oil or solvents will damage the seal.

NOTE: Oil level affects the last 1/3 of fork travel. A higher fork oil level will increase resistance to bottoming, while a lower oil level will make the last 1/3 of fork travel softer. Too high a fork oil level will cause hydraulic lock, which can result in seal leakage. Always stay within the fork manufacturer's oil level range.