




Motion Pro, Inc.
867 American Street
San Carlos, CA 94070
Tel 650.594.9600 Fax 650.594.9610
www.motionpro.com

INSTRUCTIONS

CR COMPETITION™ THROTTLE P/N 01-0056

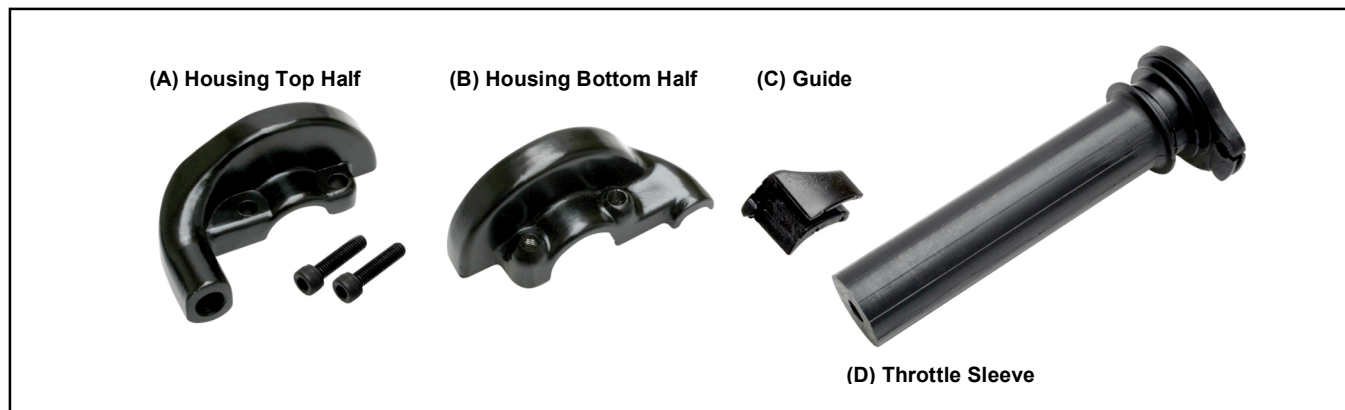

Remove the socket head screws holding the housing halves together and pull the housing apart.

Note: Do not lose the cable guide (C), it may fall out.

Insert the cable through the top half of the housing (A) and thread the cable adjuster in. Pull the inner wire through the hole and over the cable guide (C).

Place the throttle sleeve (D) onto the clean/lubed handlebar end. Insert the cable ball end into the slot on the throttle sleeve drum and insert the sleeve into the housing top half (A). Hold the housing bottom half (B) in place and check that the sleeve rotates freely and returns freely and fully to the stop at the throttle off (idle) position.

Insert the socket head screws loosely. Turn the assembly to the desired position and tighten the socket head screws evenly while retaining equal spacing (gap) between the housing halves at both sides of the handlebar. **Do not exceed 35 inch-pounds (4 Nm).** Normally, the correct position is with the cable running across the top and forward part of the handlebar

Parts Available Individually:
P/N 01-0088 Throttle Sleeve